


FEATURES

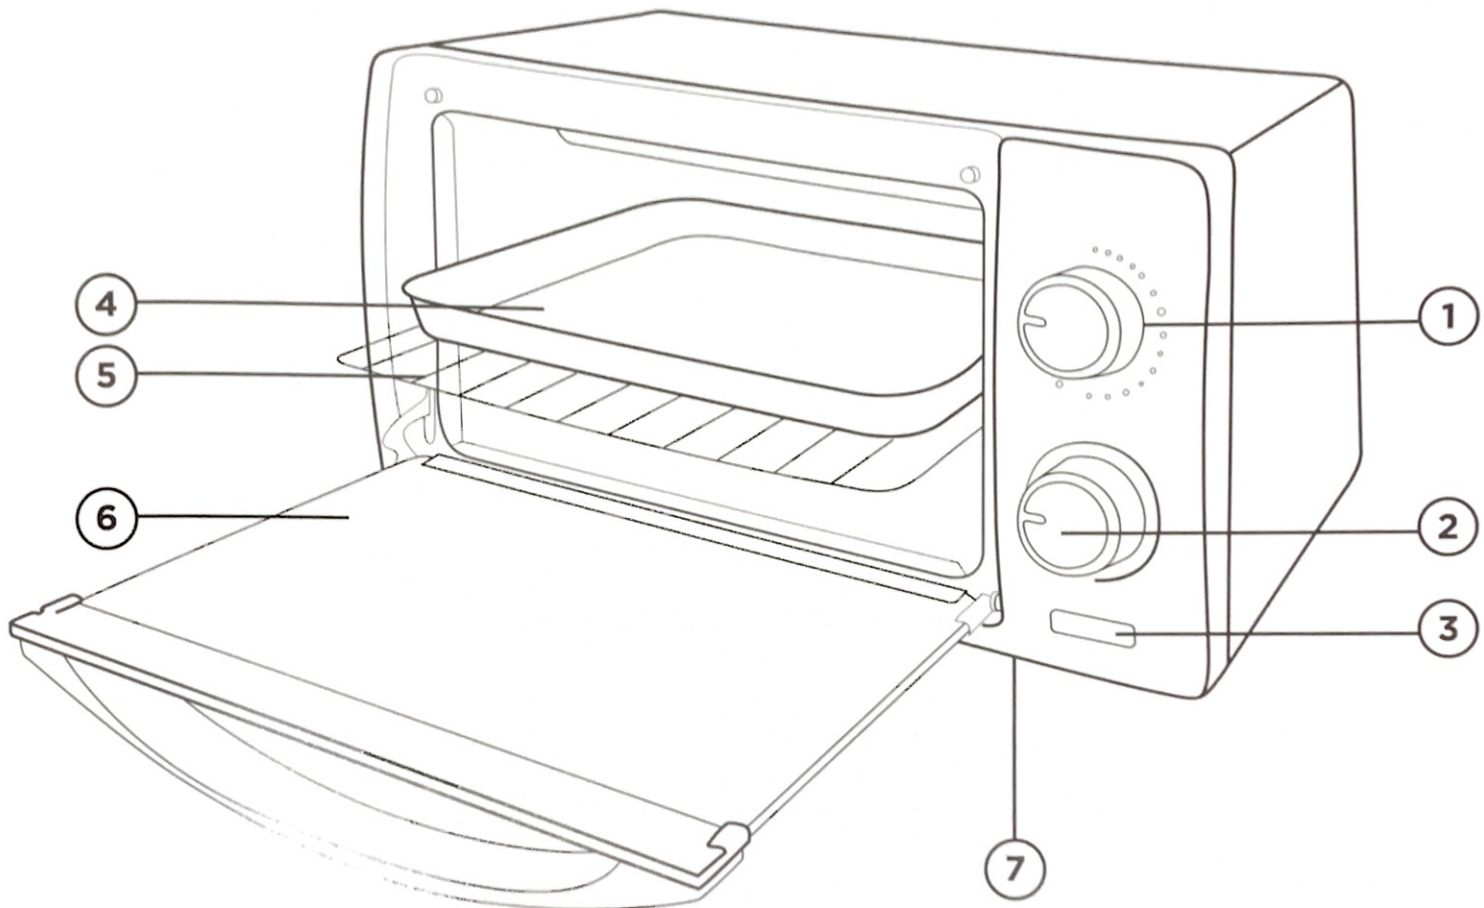

1. Temperature control
2. Timer control
3. Pilot lamp
4. Bake Tray
5. Wire rack
6. Glass Door
7. Drop down crumb tray

OPERATING INSTRUCTIONS

WARNING: Fire Hazard

If contents ignite, do not open oven door. Unplug oven and allow contents to stop burning and cool before opening door.

FOR TOAST

1. Place oven rack on higher track inside the unit. Place food item on rack.
2. Rotate temperature control knob to TOAST.
3. Rotate timer control knob past 10 and then back to desired toast color. A bell will sound when the toast cycle is complete.
4. When finished, rotate timer control knob to OFF and unplug.
Caution: Remove with care as food is HOT.

FOR BAKING

1. Do not use oven cooking bags for baking as this can cause a fire hazard.
2. Always allow at least 1 inch between food and heating element to reduce the risk of fire.
3. Always unplug unit when not in use.
4. Place oven rack in lower track inside unit or use baking pan.
5. Rotate temperature control knob to desired temperature.
6. Set timer control knob to warm. Allow unit to preheat for 4-5 minutes prior to placing food in oven.
7. When ready to bake, rotate timer control knob to a desired time. To set time, rotate timer past 10 before setting any time below 10 minutes.
8. When finished, rotate timer control knob to OFF and unplug.

TOASTING TIPS

1. To toast bagels or English muffins, place bread cut-side down. This will toast the cut side more than the outside. English muffins may need a darker setting than regular bread to achieve the same color.
2. To toast frozen pastry or waffles, select a light color and toast directly on oven rack. If pastry has a glaze or frosting, use baking pan to prevent dripping.
3. When toasting, condensation may form on oven door.
4. At the end of the toast cycle, remove toast immediately or the heat remaining in the oven will dry out your food.

USER MAINTENANCE

WARNING: Electrical Shock Hazard

1. Failure to clean the oven interior regularly may result in fire.
2. It is important that you clean the appliance after each use to prevent an accumulation of grease and avoid unpleasant odors.
3. Unplug from outlet and allow the appliance to cool before cleaning.
4. Do not immerse appliance in water or wash in sink.
5. Removable wire rack, bake pan, crumb tray may be washed under hot water.
6. Clean exterior of appliance with a damp sponge.
7. Do not use abrasive cleaners or sharp utensils to clean as this may cause damage to the appliance.
8. Allow all parts and surfaces to dry thoroughly prior to plugging in and using this appliance.

TO CLEAN CRUMB TRAY

1. Ensure oven is completely cool.
2. Remove baking pan and wire rack from oven. Tilt oven back. Push handle down to unlock crumb tray.
3. Pull tray down. Gently wipe tray with a damp, clean cloth.
4. Push tray back and lock into place.

Note: Crumb tray is not removable.